



1. Launch Library Setup \ setup.exe

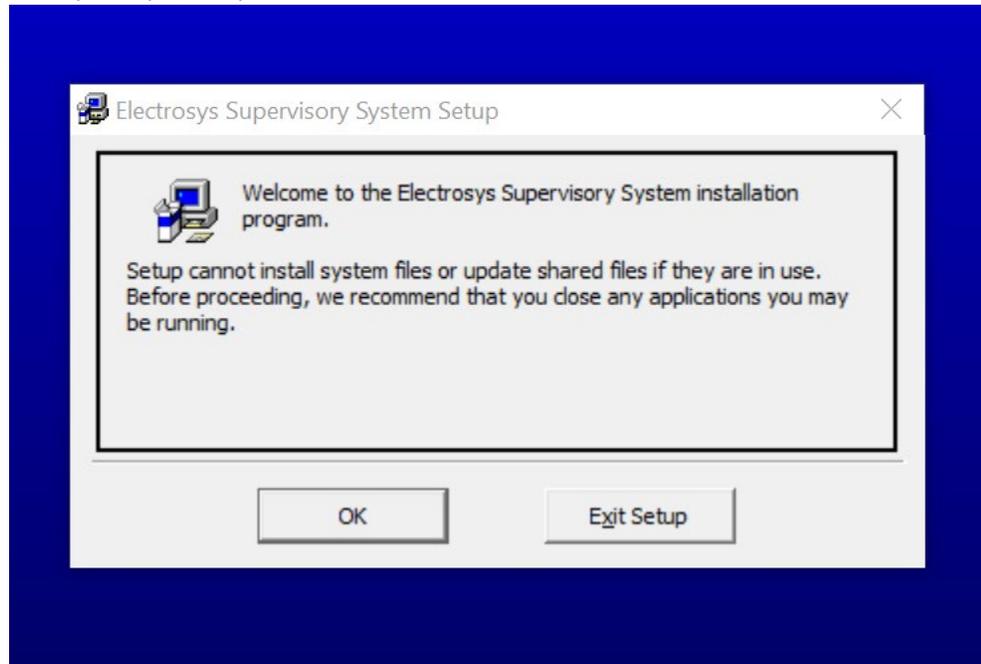


- a.
 2. Keep default Installation directory, click the install button

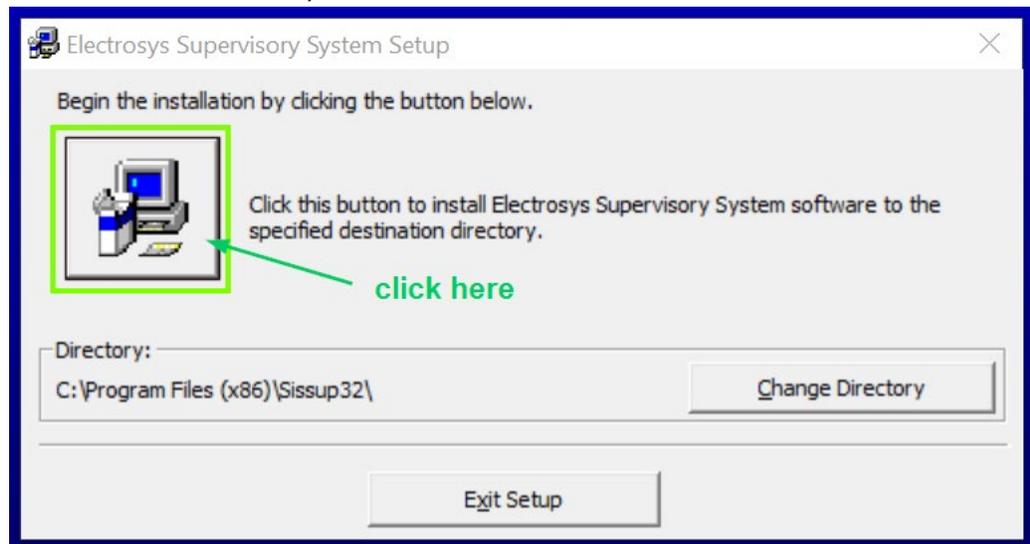

- a.
 3. Keep the default Program Group. Click Continue
 4. You may receive several "Version Conflict" notifications during the setup process. Click "yes" to keep your existing files (they will be newer than the ones in the installation file)



- a.
5. When advised that Setup is complete, click OK.
6. Copy the folder 'HPAFU_RO_V3_5' to your Desktop
7. Connect one end of the **USB-A to USB-A cable** to your PC and the other end to the front USB port of the HPA.
8. If you are running Windows 7 or Windows XP, install the appropriate USB driver from the USB Driver directory (VirCOM_Driver_Win7 or VirCOM_Driver_XP). Right-click on the .inf file and select Install

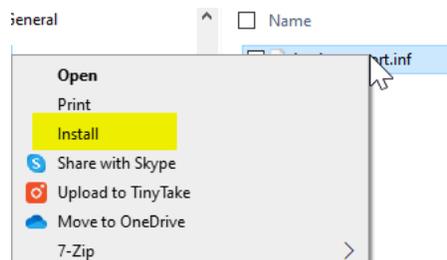


- a.
9. Confirm the COM Port assigned to the Virtual COM port.
 - a. Open Windows Device Manager from Control Panel



- i.
- b. Browse to the Ports (COM & LPT) section to identify the correct port assignment
 - i.
10. Browse to the 'HPAFU_RO_V3_5' folder on your PC and run 'HPAV305_READONLY.exe'
11. Open Port > COM Properties. Select the COM port identified in Step 9. Click OK



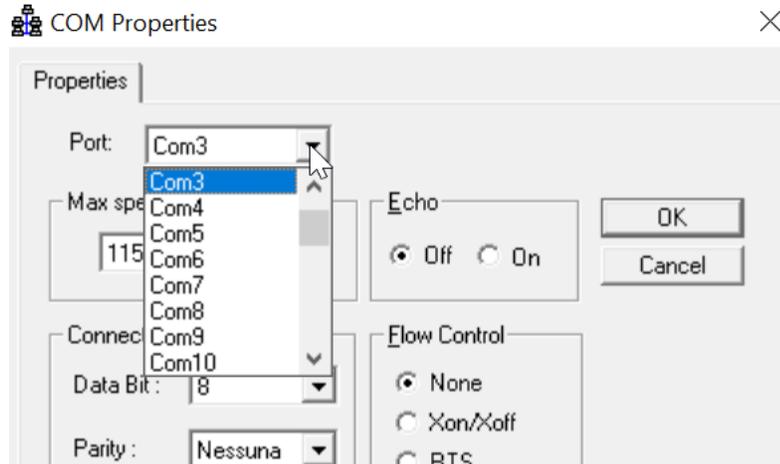

- a.
12. Click the "START COMM" icon to connect to your HPA.



a.

*** no guarantees*** For Windows 10, you may try these drivers: <https://ftdichip.com/drivers/vcp-drivers/>